

Specifications

Installation Instructions

Flange Trim Kit - Reveal

FTK125RVL & FTK125DRVL

Application

For use as an easy way of covering the nailing flange where drywall or other wall material is already installed BEHIND the shower or tubshower with one or two reveal-type front flanges.

Installation

Measure the distance between the drywall at the back wall. Trim the sections to size with a hacksaw. Use the Power Grab adhesive to create mounds approximately 3/4" tall on the nailing flange at 8" intervals. Press the trim in place. Repeat with the remaining sections. Caulk around all edges with both 100% silicone and latex caulk as shown below.


Material

Matching gelcoat fiberglass
Install with Power Grab and caulk


Kit consists of

- 1 ea Backwall section
- 1 ea Non-reveal front section
- 1 ea Non-reveal top section
- 1 ea Reveal front section (2 ea for double)
- 1 ea Reveal top section (2 ea for double)
- 1 ea Power Grab Construction Adhesive
- 1 ea 100% Silicone




Part Numbers by shower height
(Single Reveal) FTK125RVL for 42" to 82-3/4"
(Single Reveal) XFTK125RVL for 83" to 94-1/2"
(Double Reveal) FTK125DRVL for 42" to 82-3/4"
(Double Reveal) XFTK125DRVL for 83" to 94-1/2"

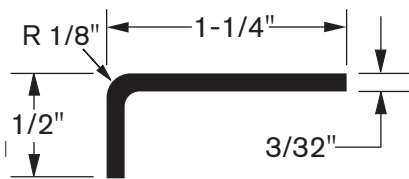


Cross Section of Trim

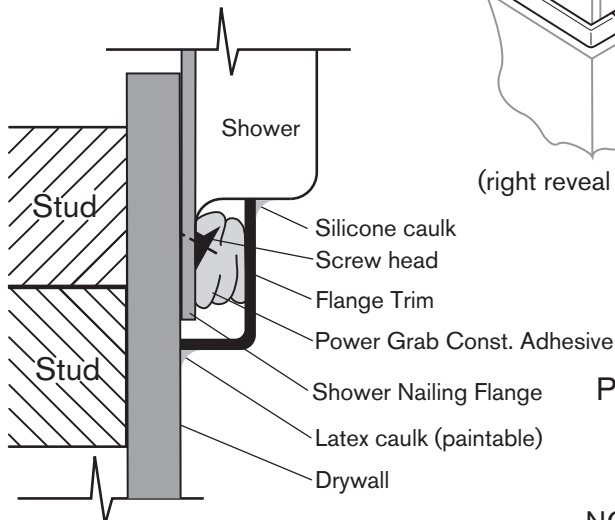

Cross Section of Trim installed

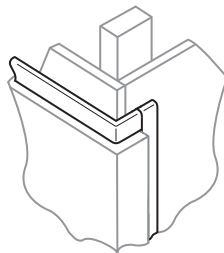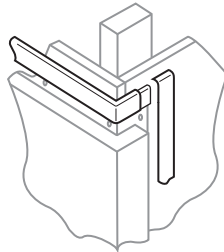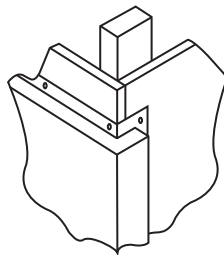

(right reveal shown)

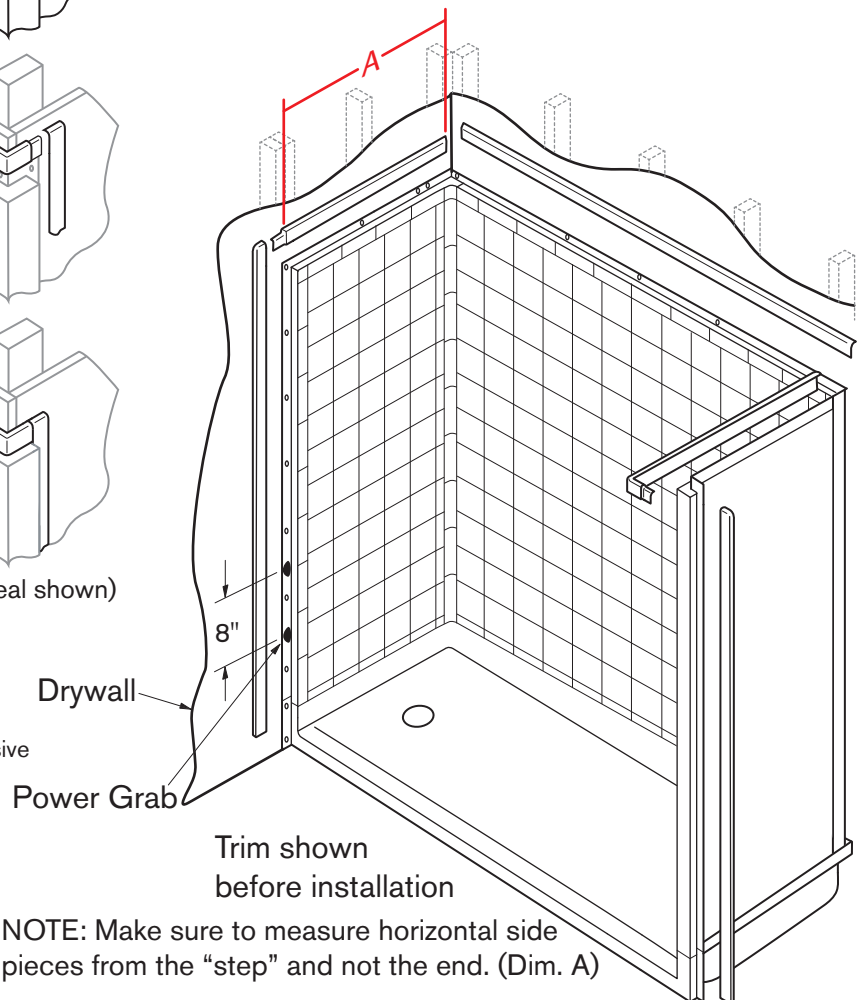

NOTE: Make sure to measure horizontal side pieces from the "step" and not the end. (Dim. A)